

www.pfi.it

VL Seksiyonel Kapı Montaj Kılavuzu
VL Sectional door assembly manual



CE

PFI 
ACCESS WAY SOLUTIONS

ATTENTION! GENERAL WARNINGS!

TO INSTALL, USE AND MAINTAIN THIS DOOR SAFELY, A NUMBER OF PRECAUTIONS MUST BETAKEN. FOR THE SAFETY OF ALL CONCERNED PAY HEED TO THE WARNINGS AND INSTRUCTIONS GIVEN BE LOW! IF IN DOUBT, CONTACT YOUR SUPPLIER.

SPECIAL SAFETY WARNINGS OR REMARKS IN THIS MANUAL ARE INDICATED WITH THIS SYMBOL:READ THESE WARNINGS CAREFULLY.

To install, use and maintain this door safely, a number of precautions must be taken. For the safety of all concerned pay heed to the warnings and instructions given be low! If in doubt, contact your supplier.

SPECIAL SAFETY WARNINGS OR REMARKS IN THIS MANUAL ARE INDICATED WITH THIS SYMBOL:READ THESE WARNINGS CAREFULLY.

- This manual has been written for use by experienced fitters and as such is not suitable for d.i.y. purposes or for use by trainee fitters.
- This manual describes the installation of the hardware set components, door sections (panels) and refers to installation manuals of the electrical operators. Be sure to supplement this manual if needed with instructions for any additional components not described in this manual.
- Before starting, read this manual carefully!
- Certain components may be sharp or have jagged edges. As such you are advised to wear safety gloves. 9All the components which have been supplied are designed for use with this specific overhead door.
Replacement or adding additional components may have an adverse effect on the safety of, and the guarantee on, the door. Also the CE-approval which has been granted to this door combination will be cancelled when components are changed or installation is not done according to this manual! Installer is responsible for this.
- During tensioning, springs can exert large forces. Work carefully. Use the proper equipment. Ensure that you are standing in a steady position.
- Ensure that there is sufficient light during installation. Remove obstacles and dirt. Make sure that there is no one else present other than the fitters. Other people (children!) may get in the way or endanger themselves during the installation.
- Ensure that the building is constructed strong enough to carry the overhead door construction. It is the responsibility of the installing company to use fixing materials which are strong enough and equipped to fix the overhead door to the building.
- A power operated overhead door may not be equipped with a pull cord (rope). Be sure that this has been removed when a manual operated door is being equipped with an E-operator.
- Environments closed by an electrical operated overhead door with operators which are not disconnectable and where the door cannot be manual operated must be equipped with a pass door.
Cutting of the bottom section is not allowed. The forces on cable break devices and bottom brackets are too high. Cutting is weakening the construction of the door on this critical point.

This door can only be taken into use, when all instructions are followed and:

- The installer has checked the combination of hardware, panel and e-operator as being approved and safe. Make sure to check the max. peak force and the proper functioning of the safety edge system in combination with the operator.
- All documentation has been handed over to the end-user: Ila Declaration of conformity, User Guide, Maintenance Instructions, Dismantling instructions, Service Log Book and this manual.
- A CE-identification plate has been placed on the door.
- User has been given instructions and demonstration of the proper use and functioning of the door.

APPLICABLE CE DIRECTIVES AND RESTRICTIONS:

Industrial overhead doors brought into the European market must follow the EMC-Directive*, Low Voltage Directive*, Machine Directive* and Construction Products Directive, issued by CEN.

(* = only power-operated doors)


PFI has developed and constructed this hardware set according to these directives. This gives a restriction to the max. forces and dimensions of industrial doors:

Max width: 8 meter
Max height: 6 meter
Max door weight: 700 kg

Standard equipped with anti-drop protection: Cable break device and spring breaking device

Other safety accessories: roller protection, bottom safety edge system (when power operated), slack cable device, cable inside track system.

Tested for CE when selecting the proper Flexi-Force components, and combining with tested panels and operator/control unit combinations.

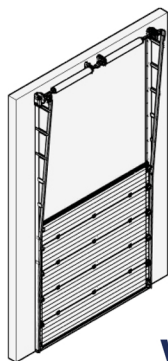


Vertical lift

110A-1


01 110 991 rev. 13-04-2015

1

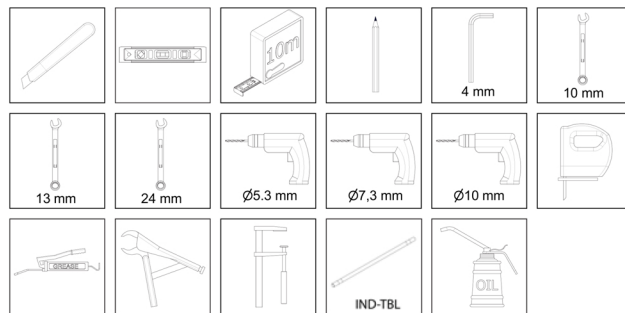


01 110 991 rev. 13-04-2015

2

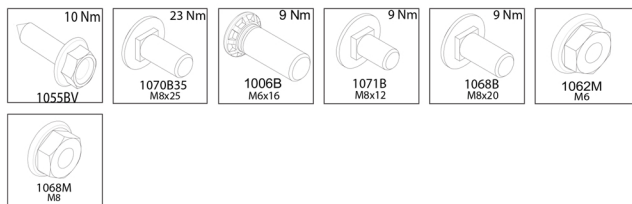

01 110 991 rev. 13-04-2015


3

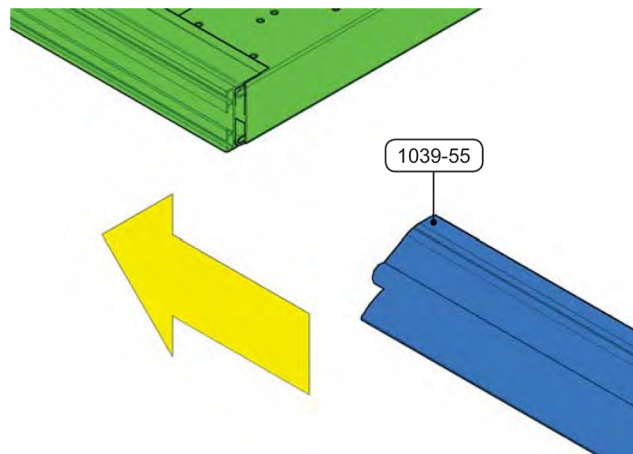

106B1-7

01 110 991 rev. 13-04-2015


4

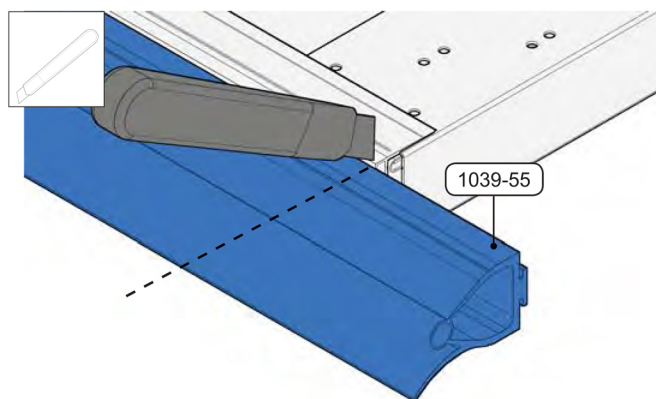

106B1-8

01 110 991 rev. 13-04-2015


5

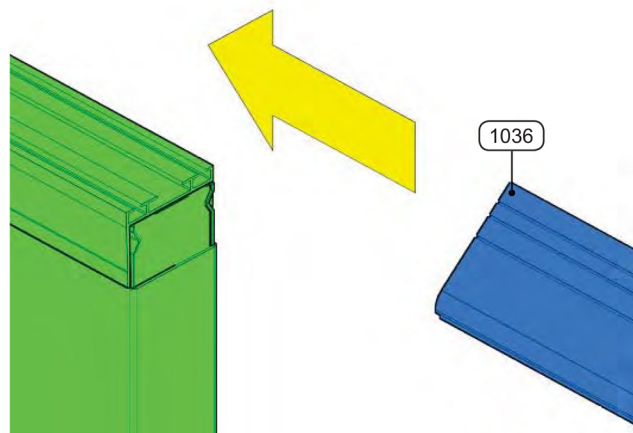

106C1-1

01 110 991 rev. 13-04-2015


6

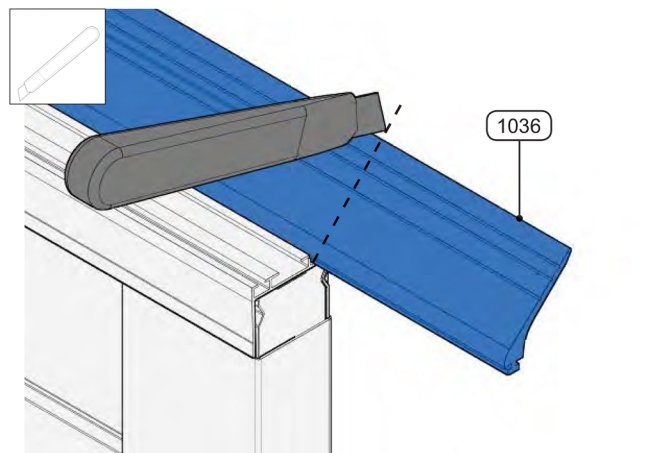

106C1-2

01 110 991 rev. 13-04-2015









7







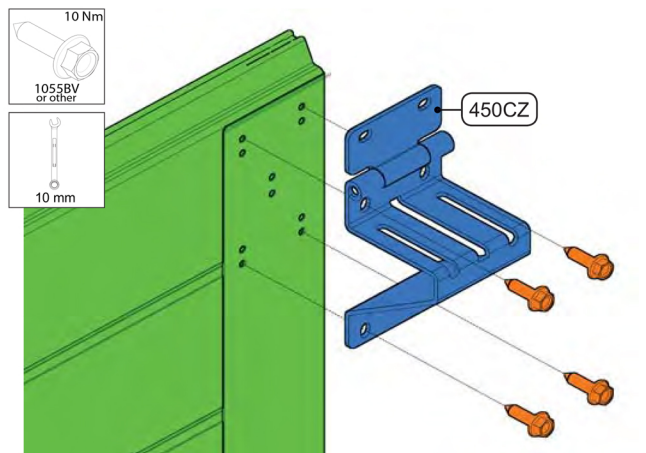










106I1-1









01 110 991 rev. 13-04-2015









8

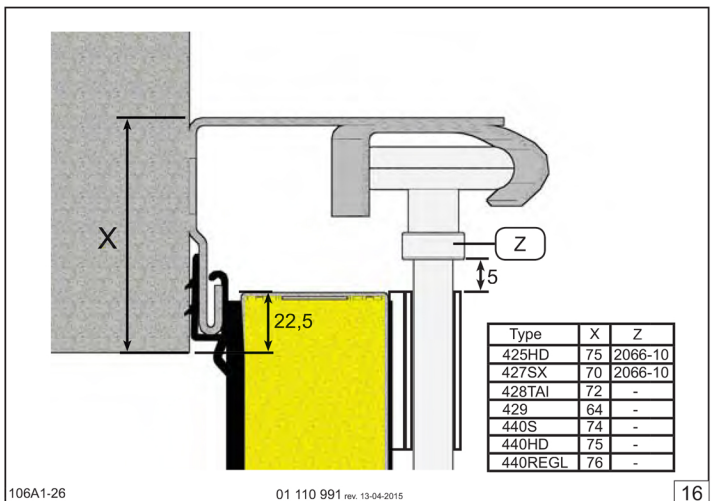
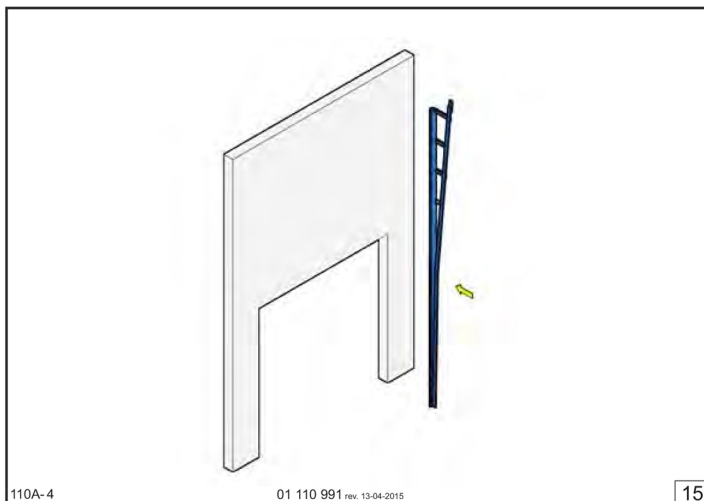
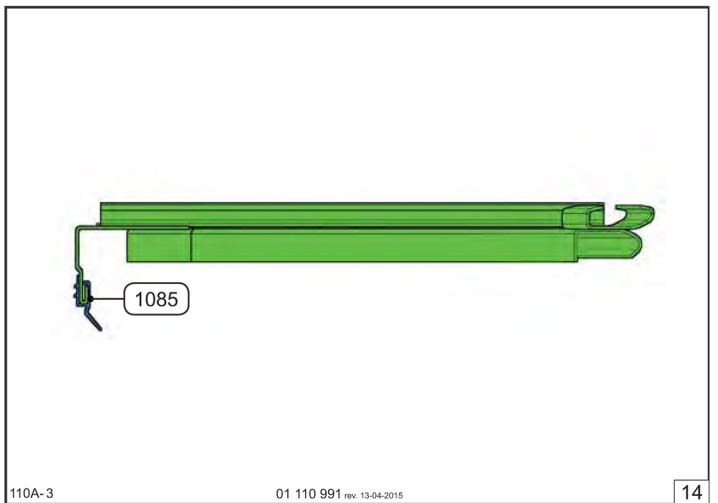
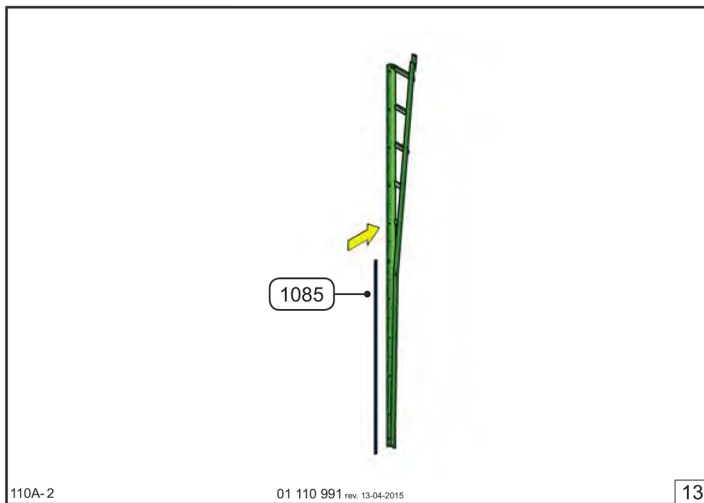
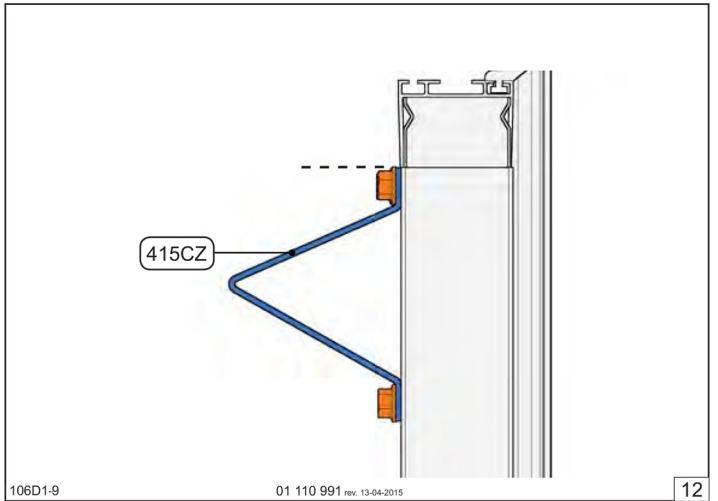
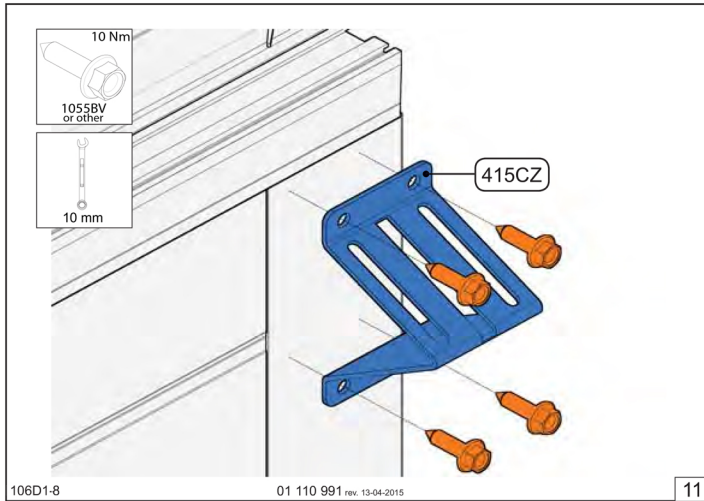
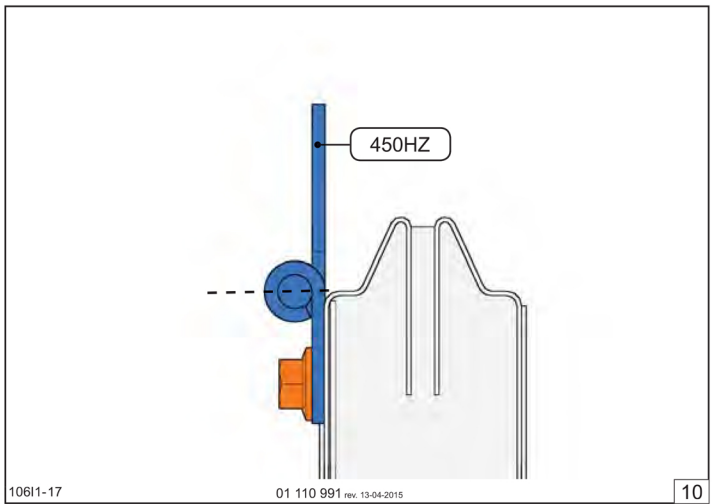
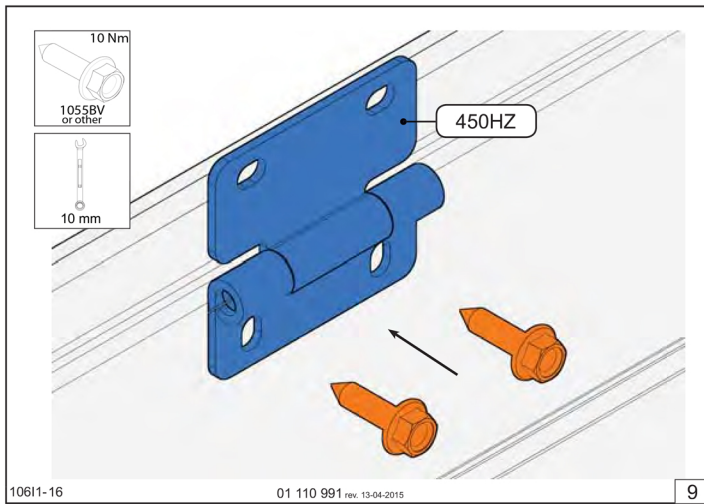



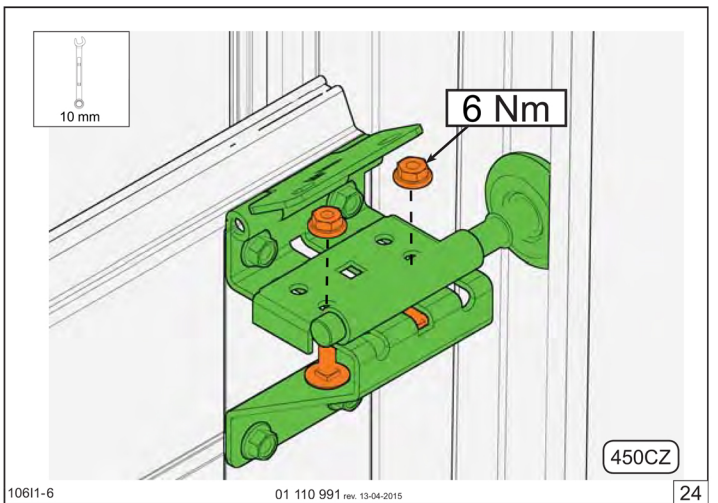
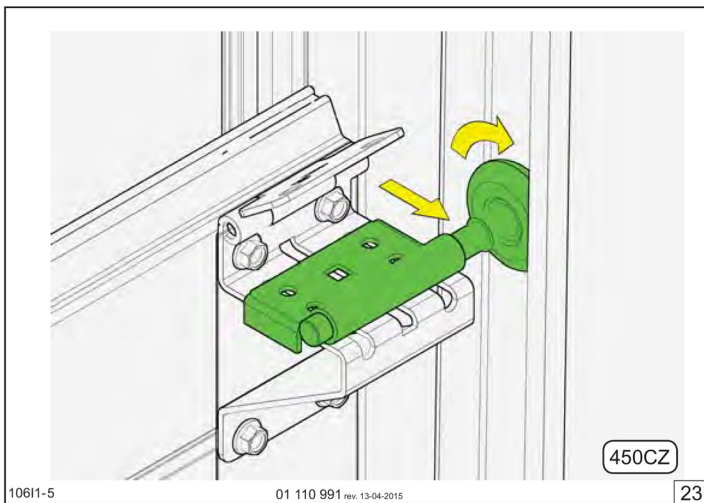
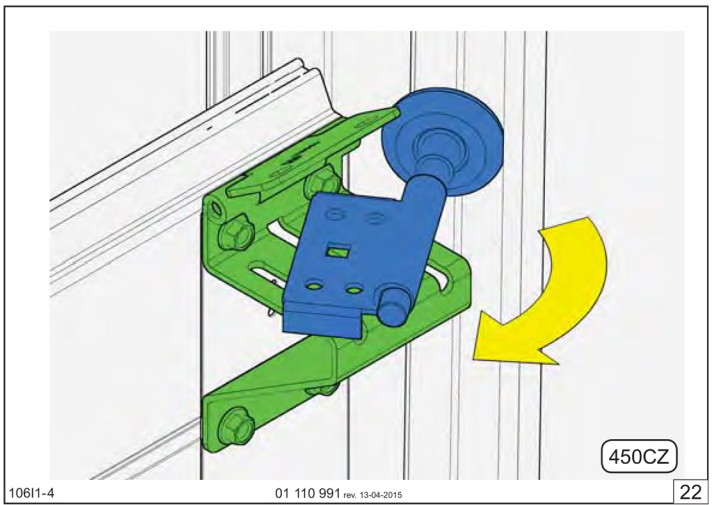
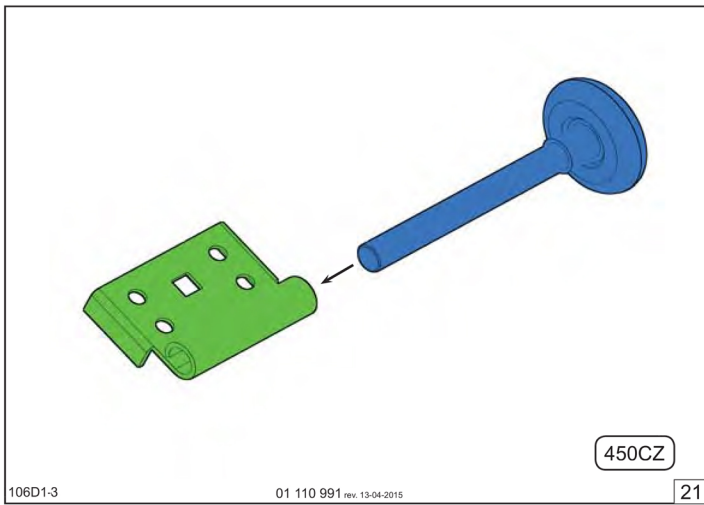
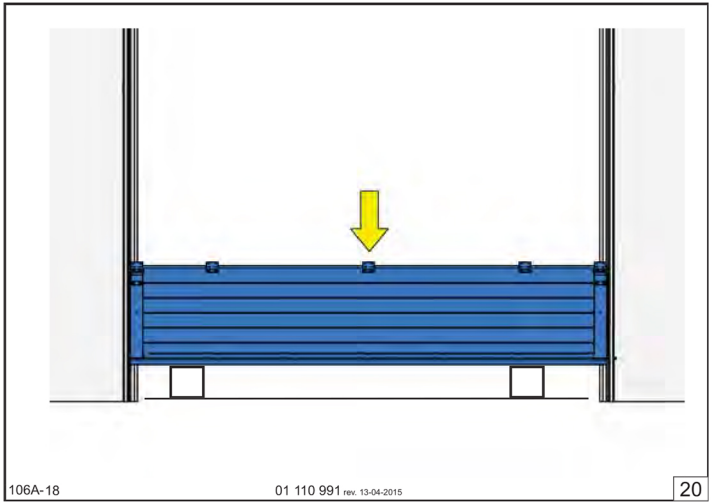
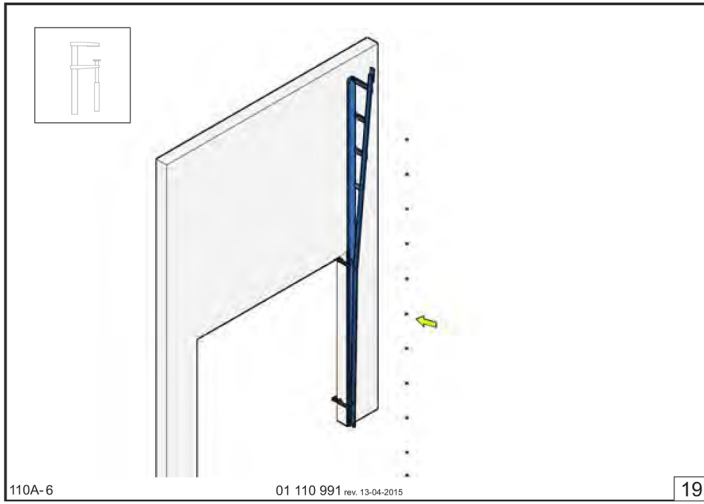
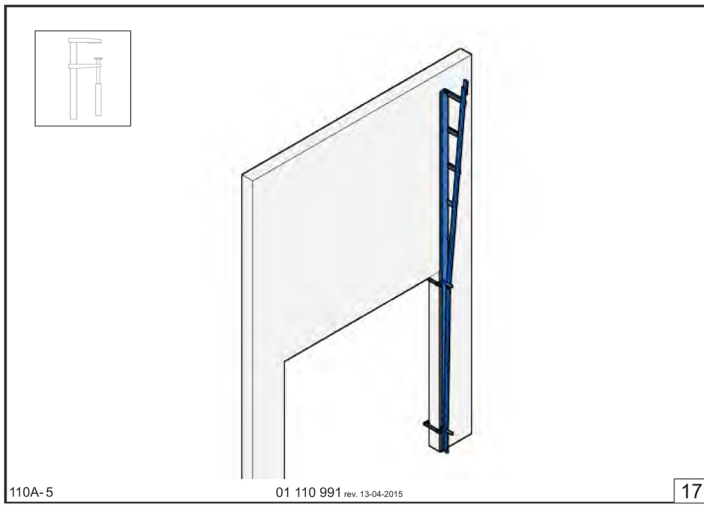


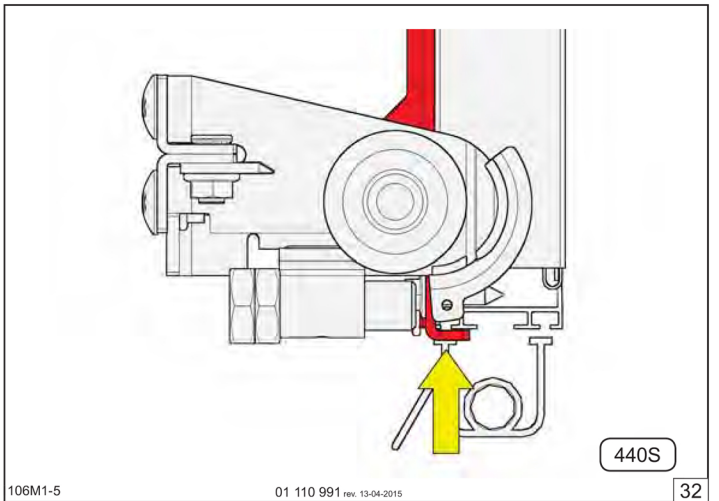
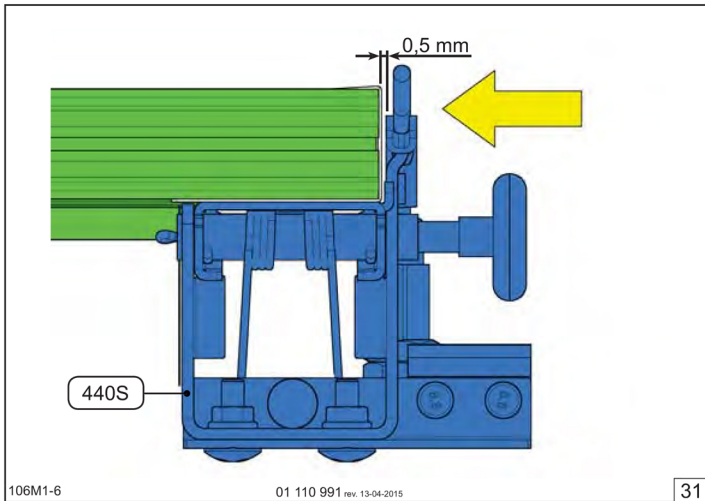
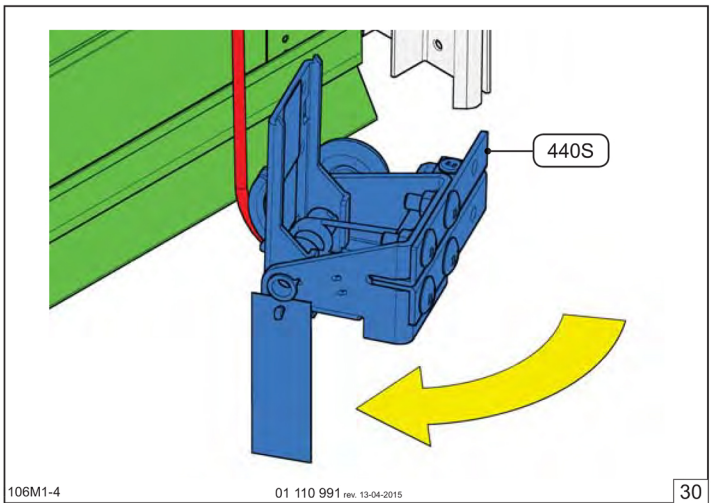
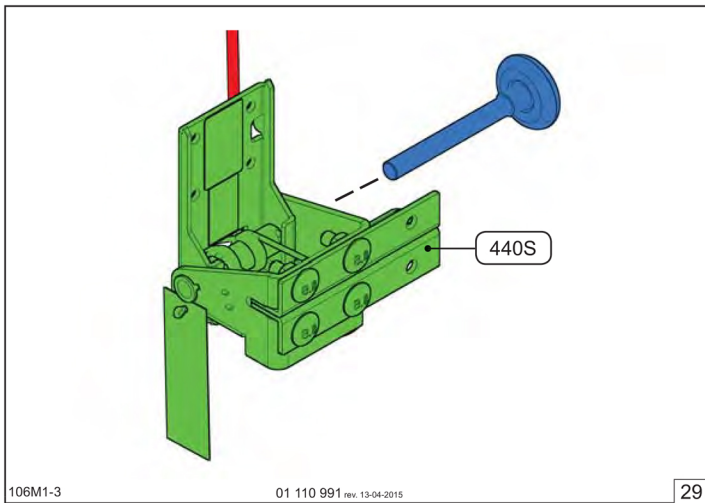
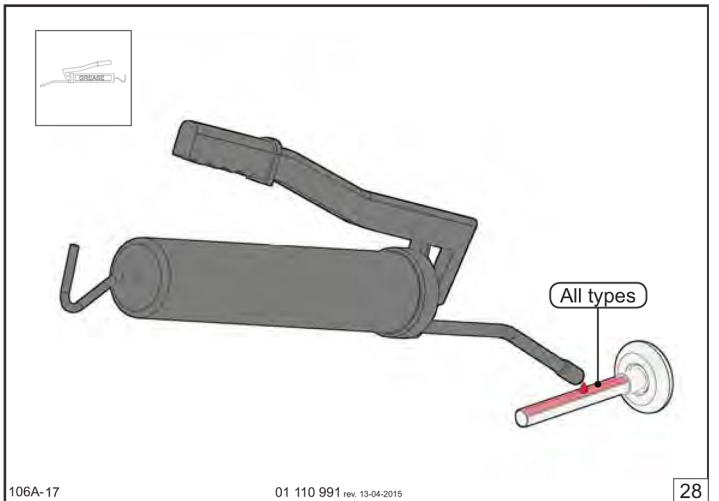
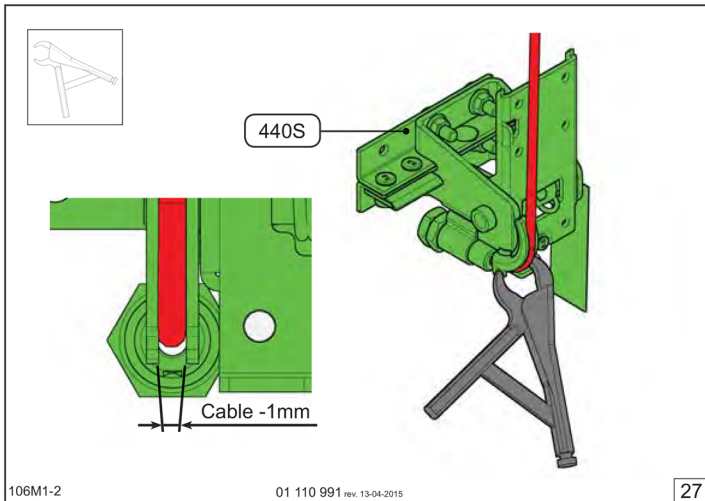
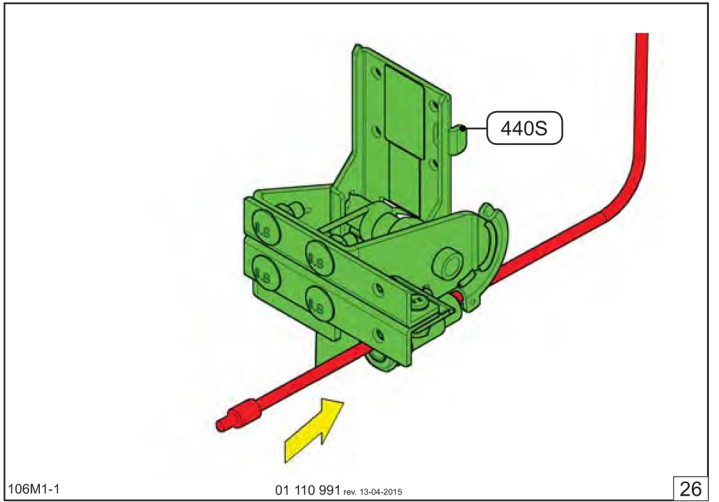
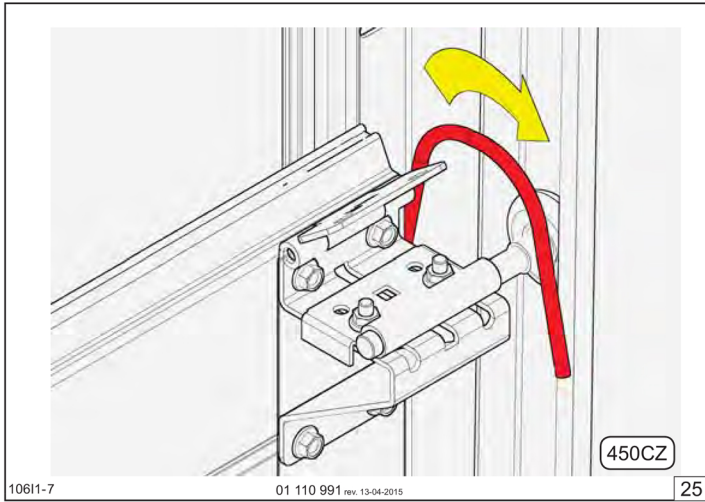


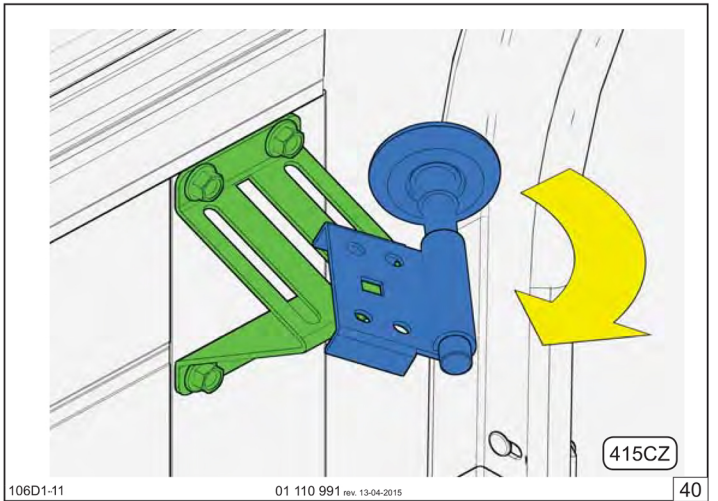
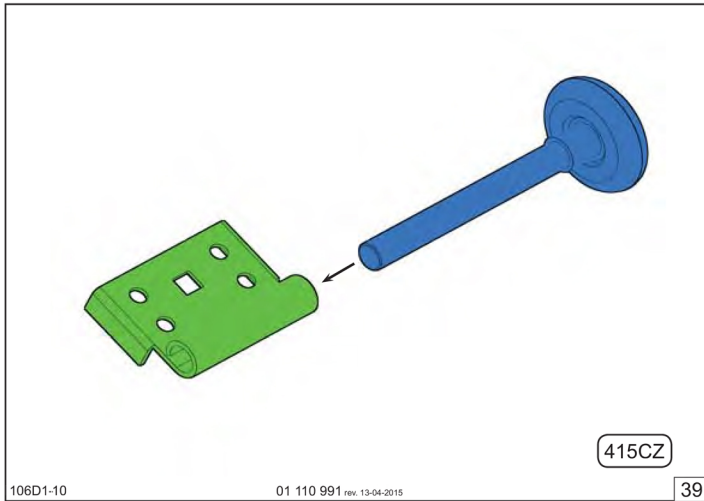
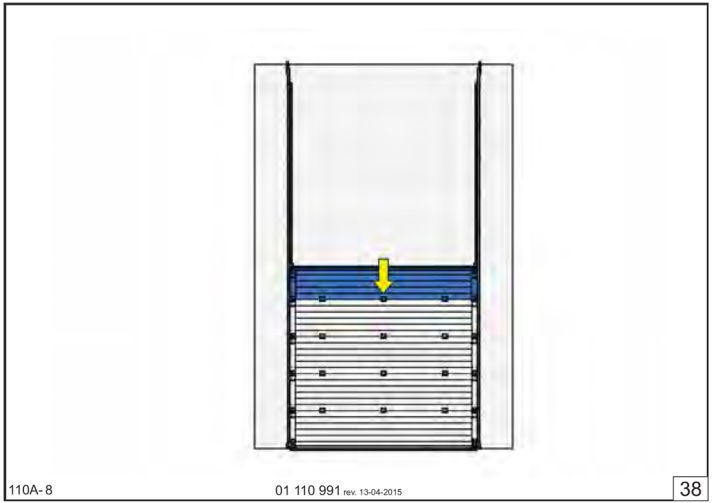
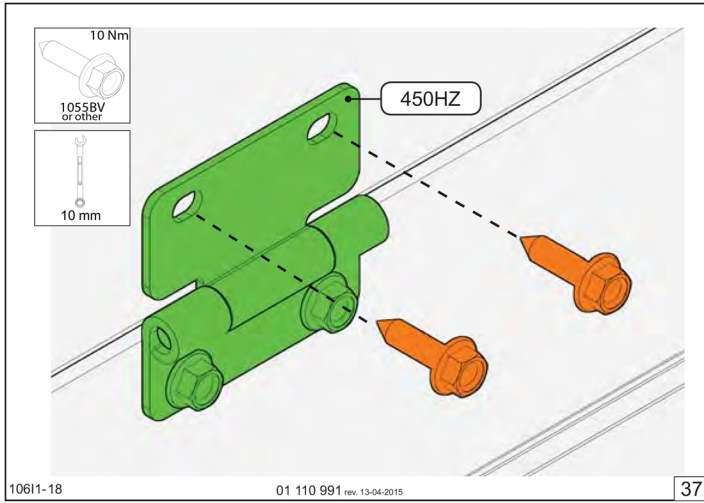
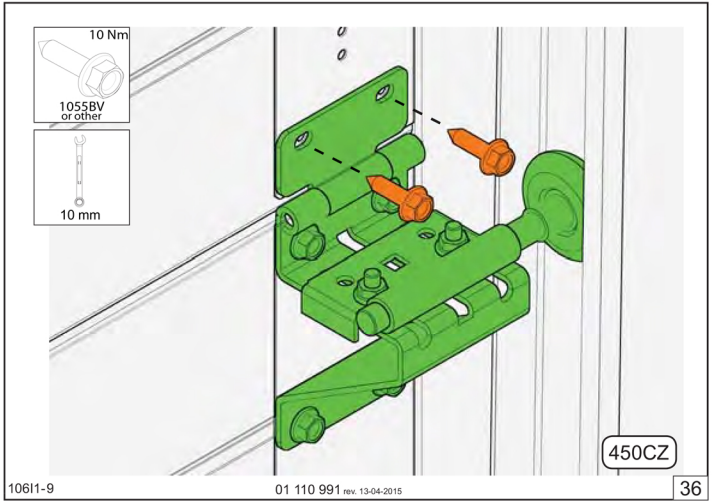
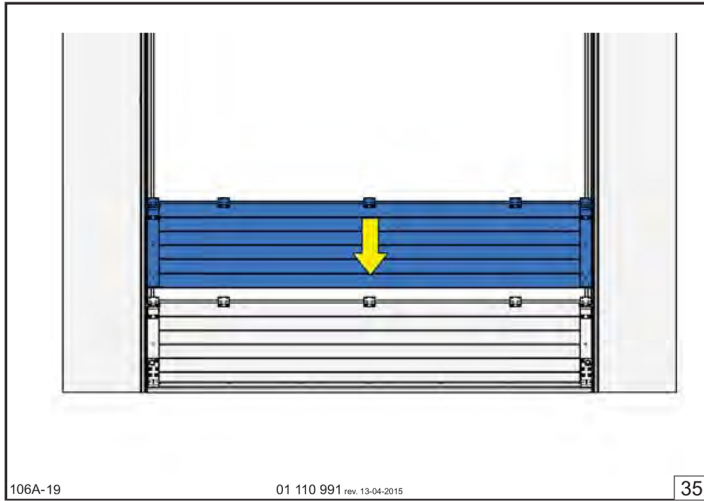
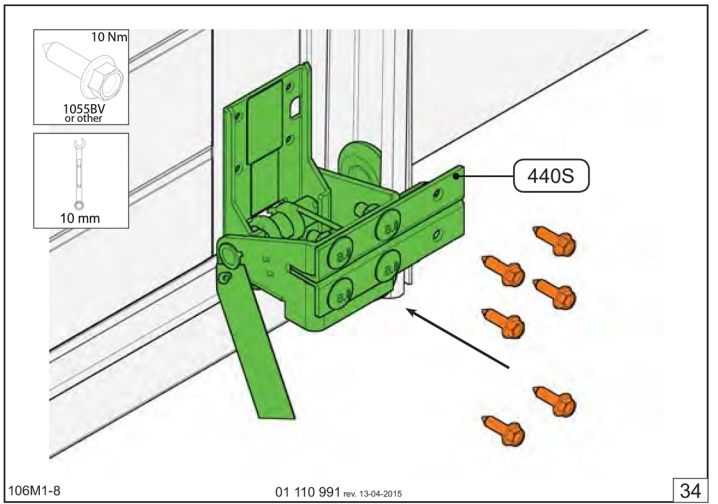
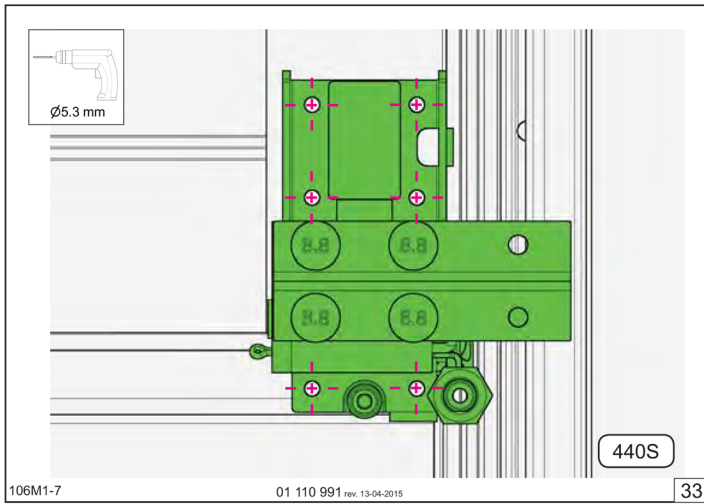


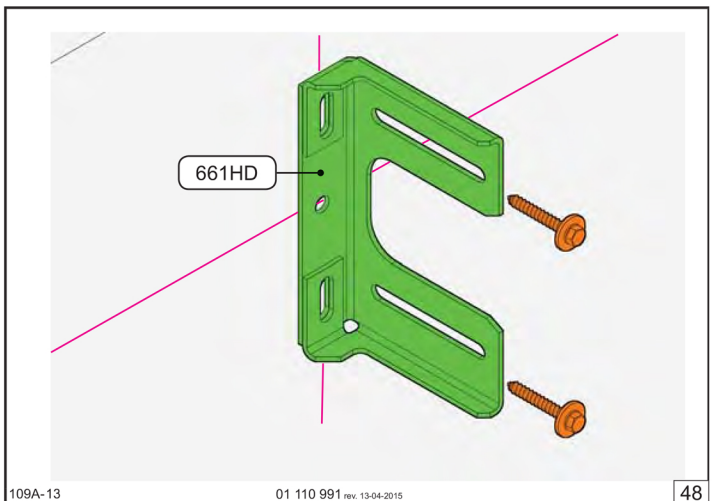
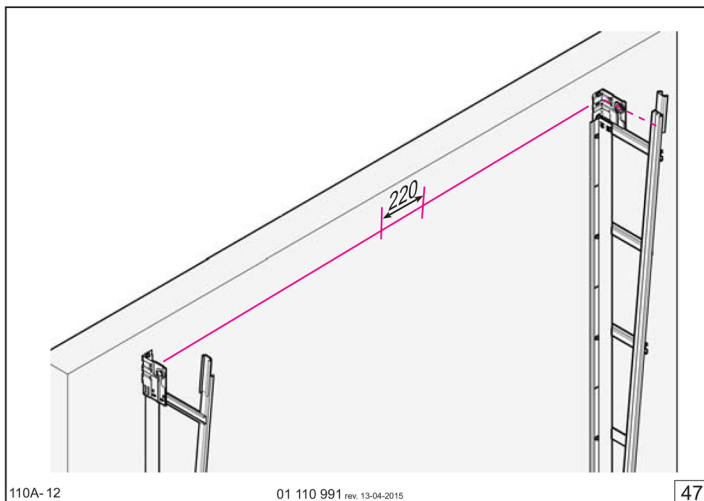
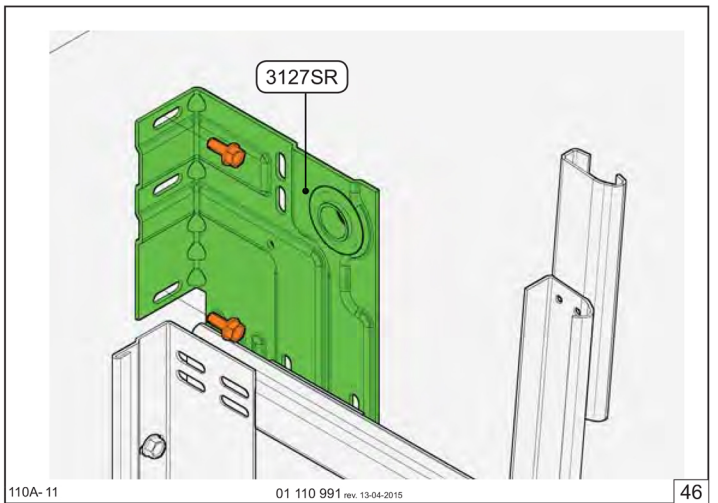
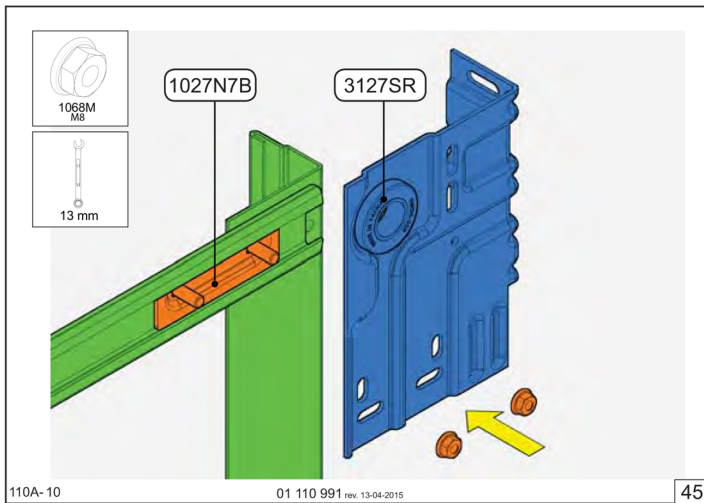
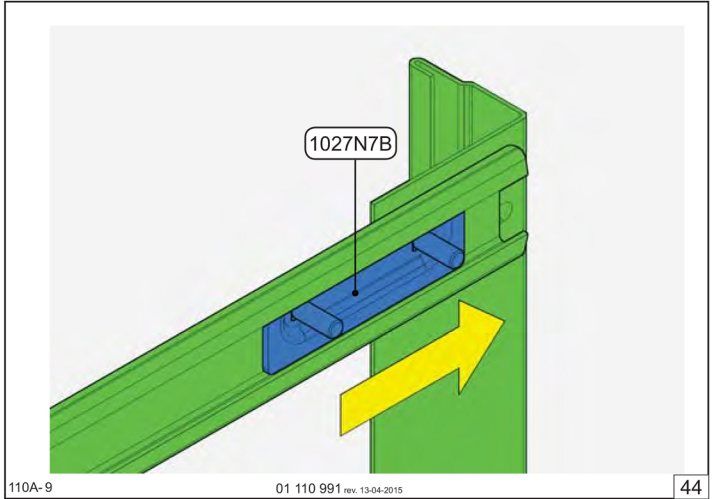
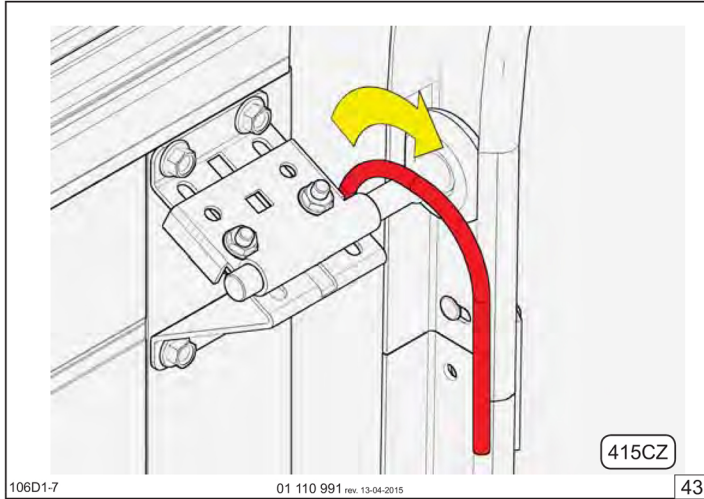
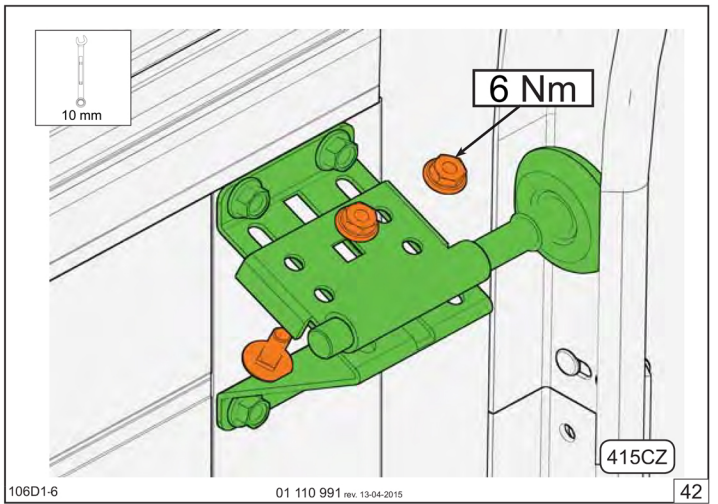
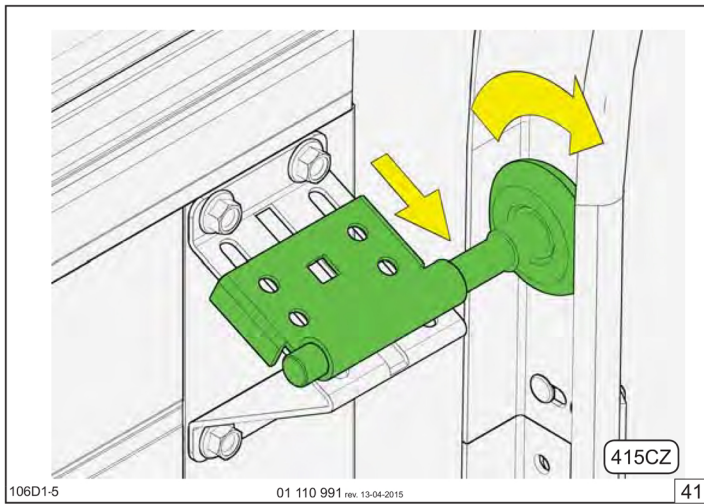


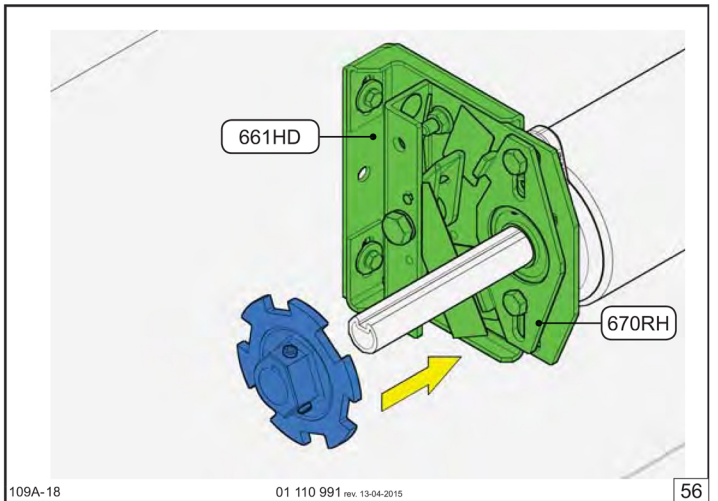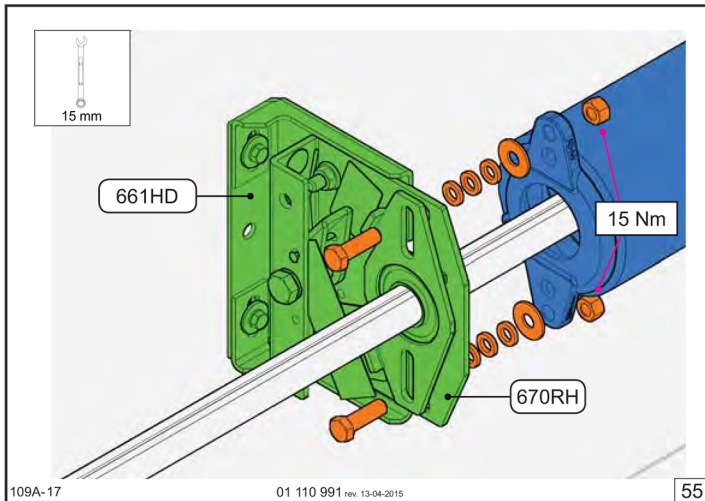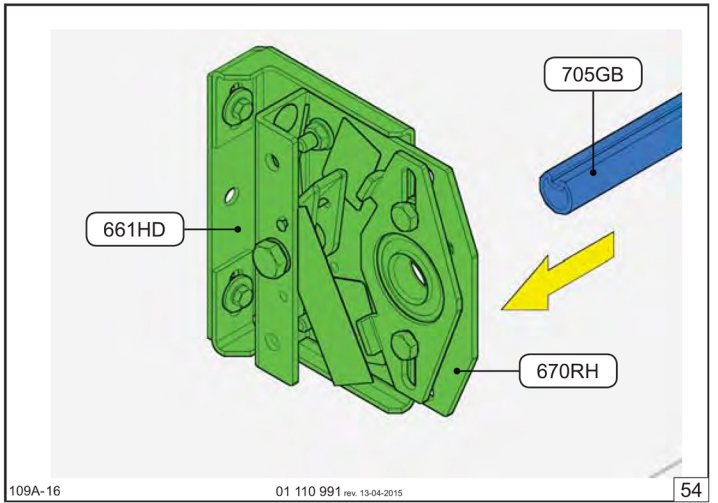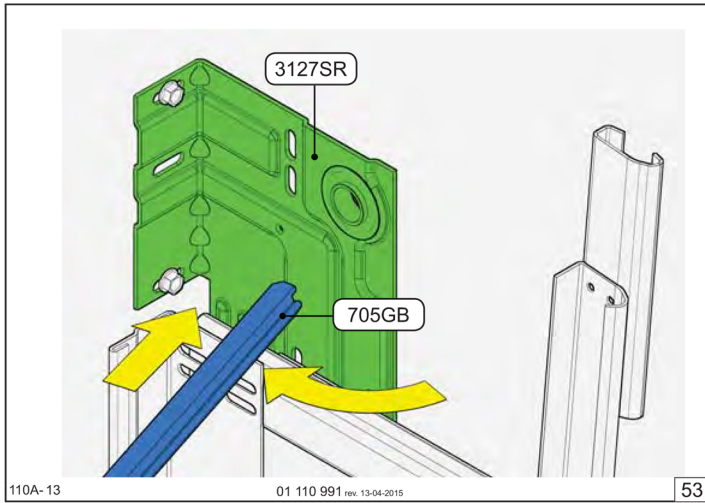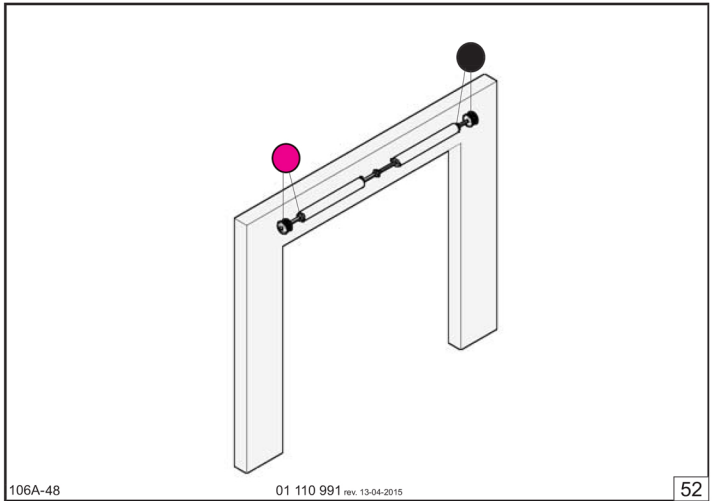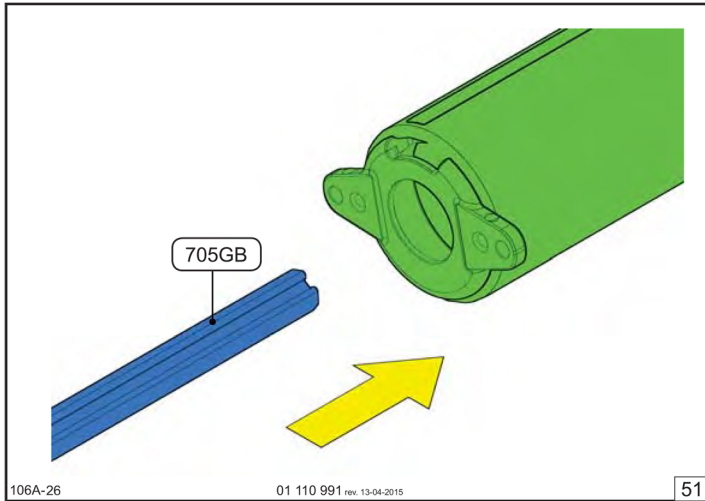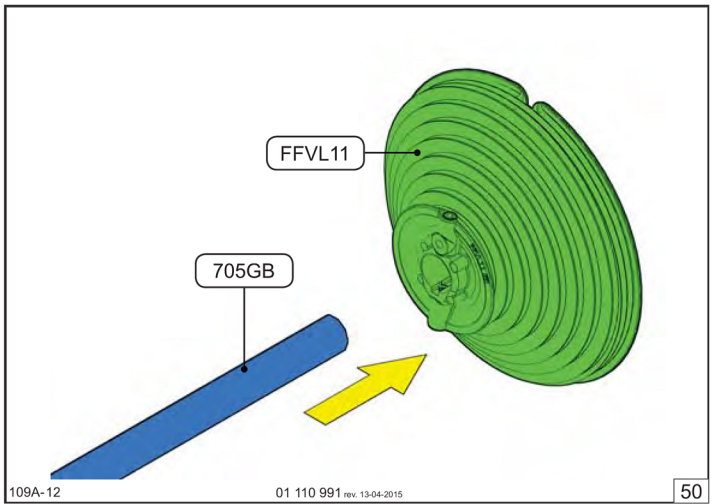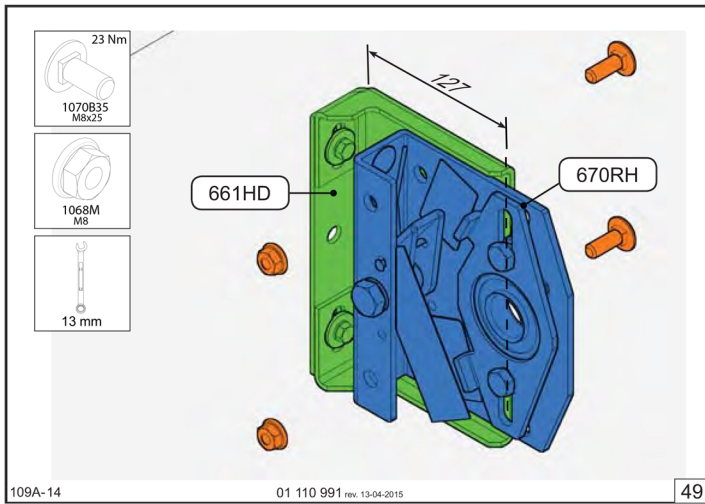

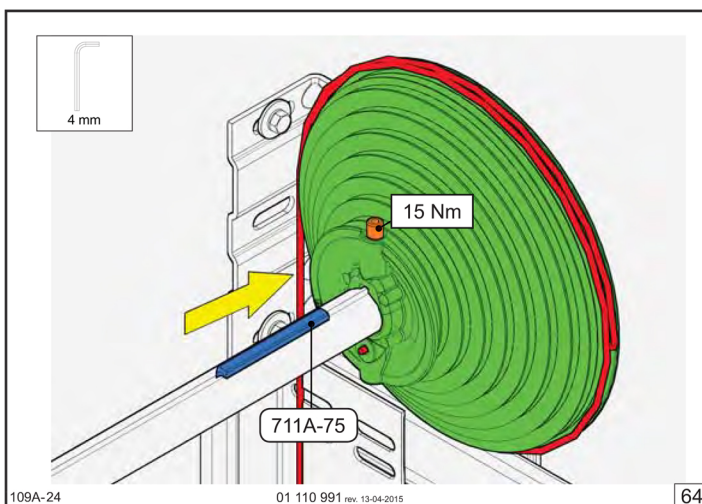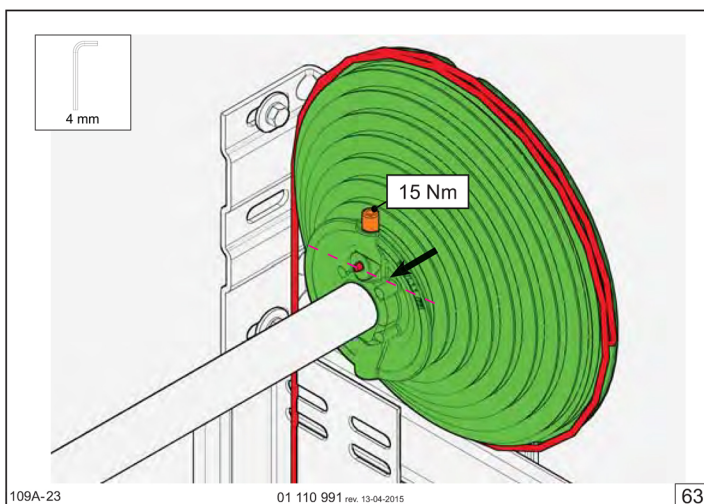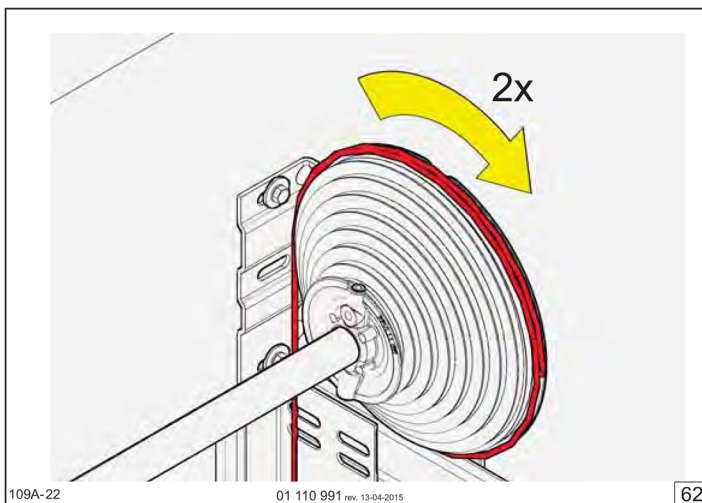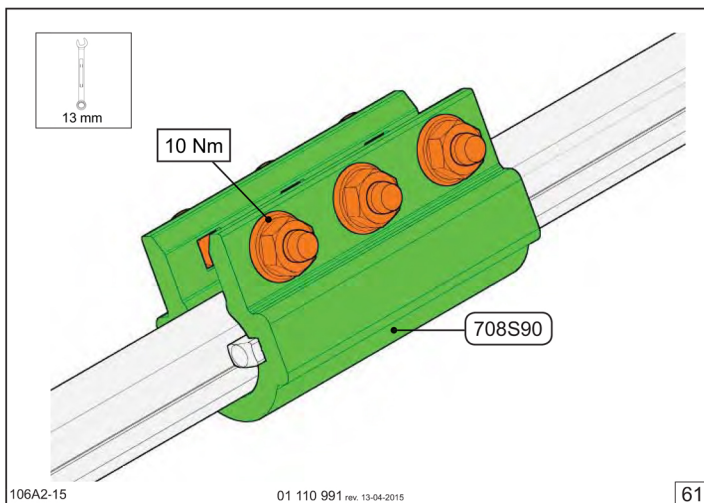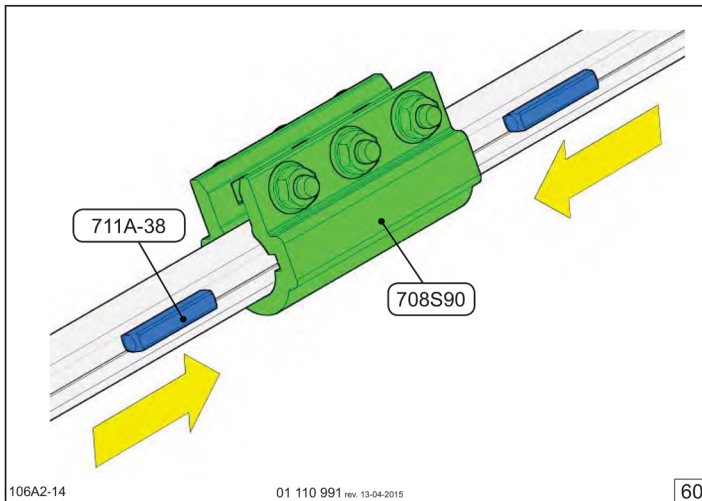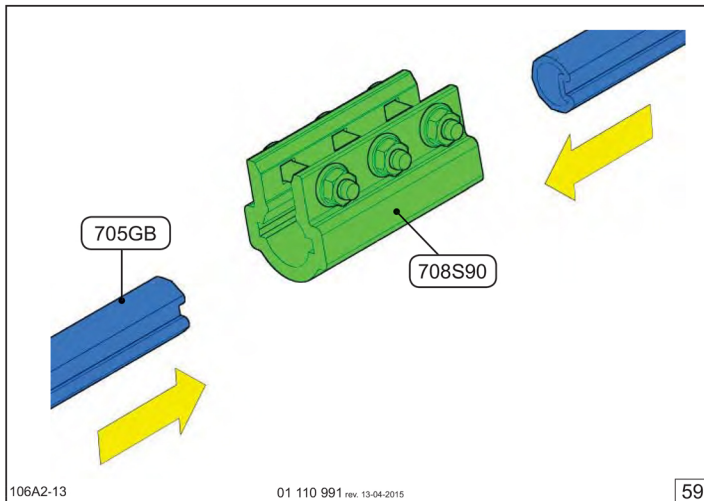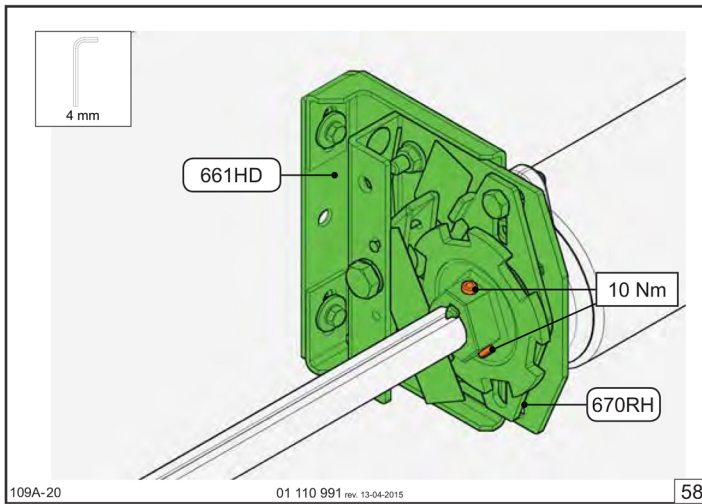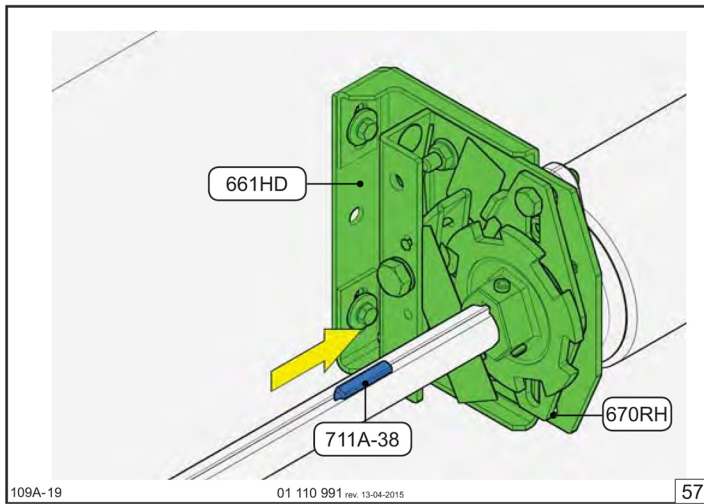

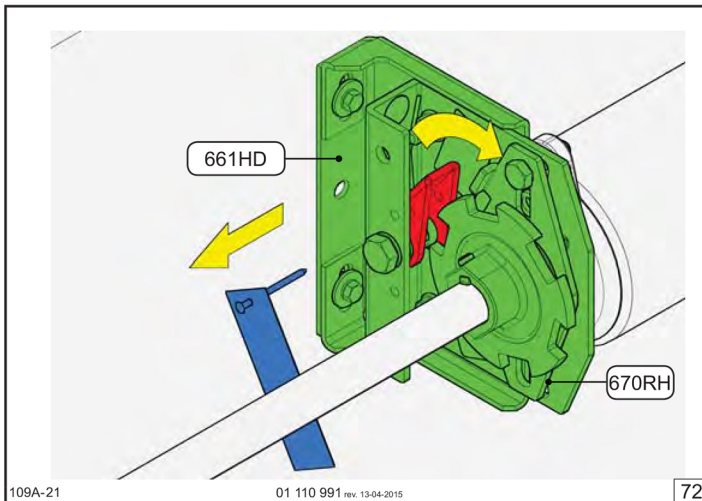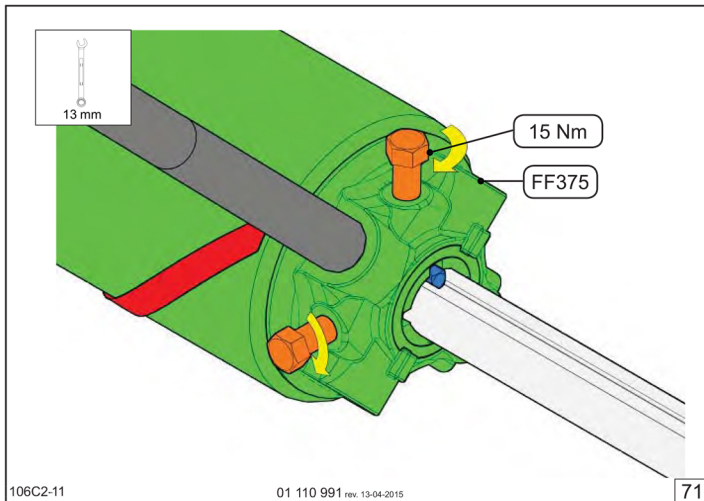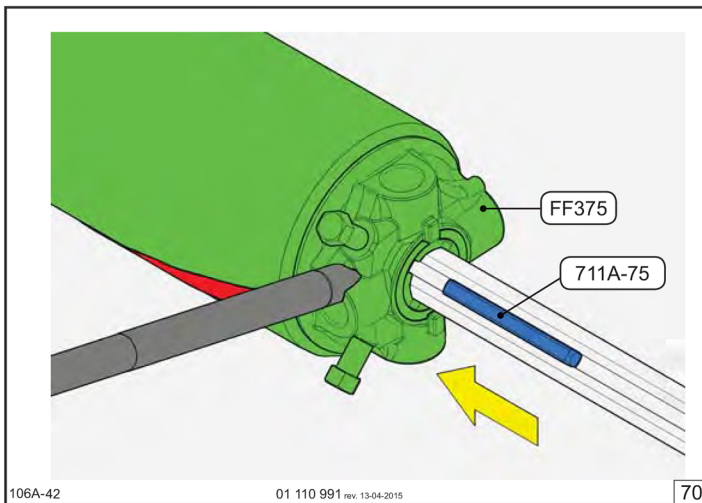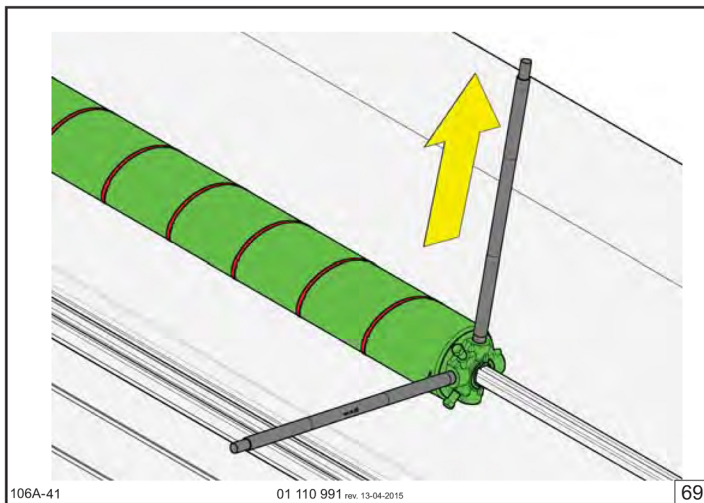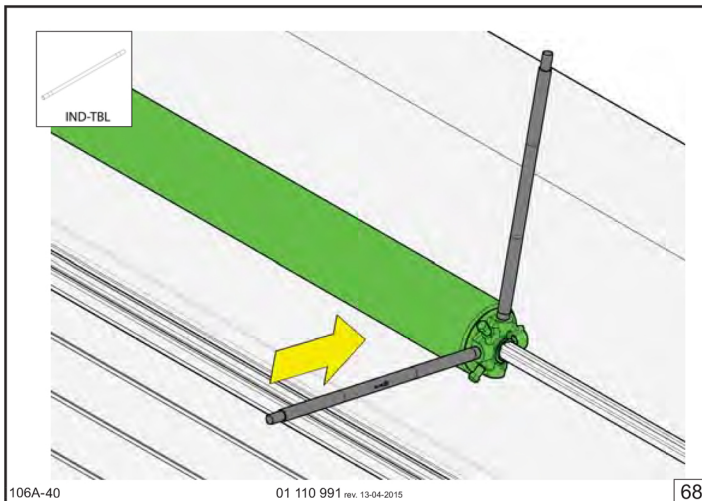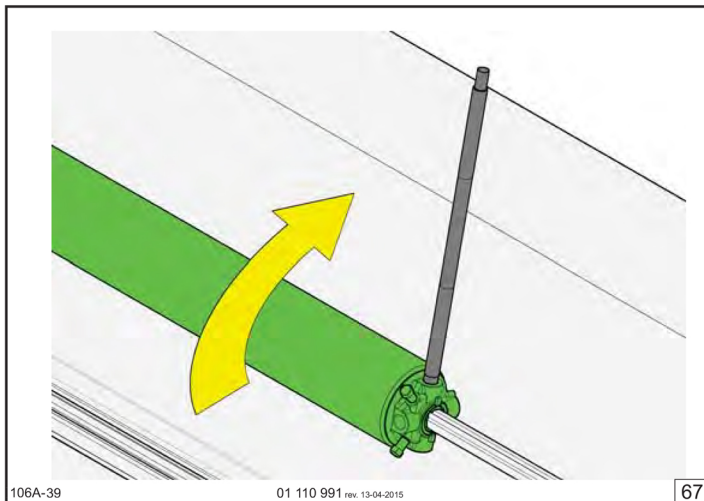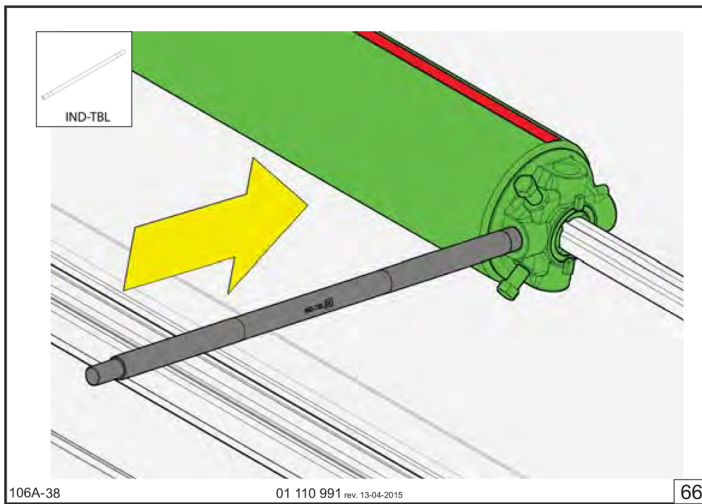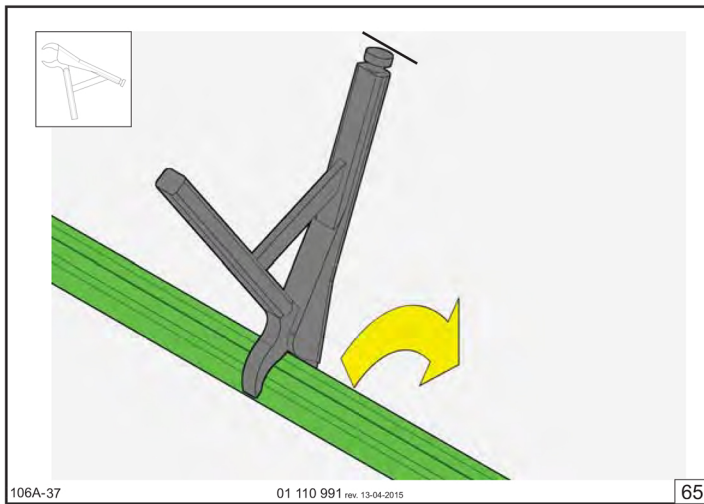

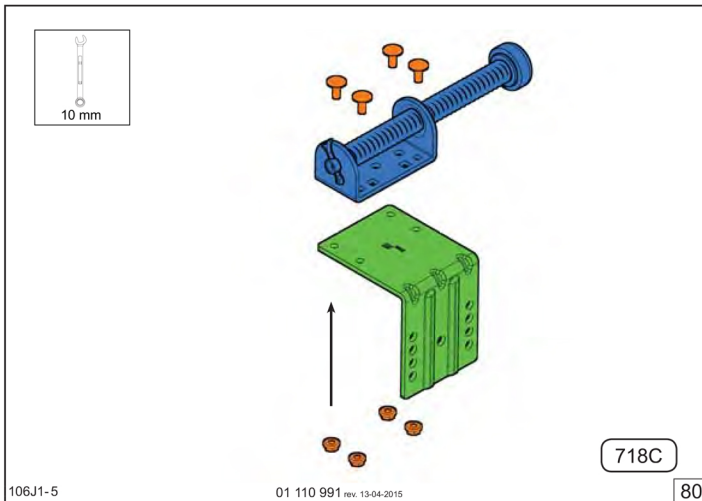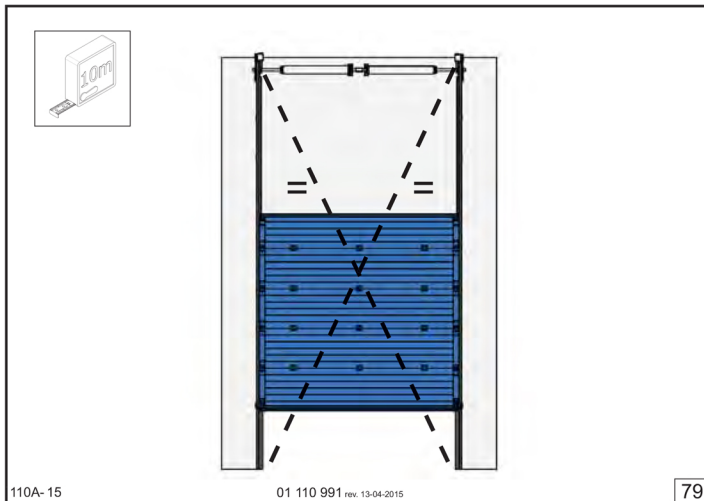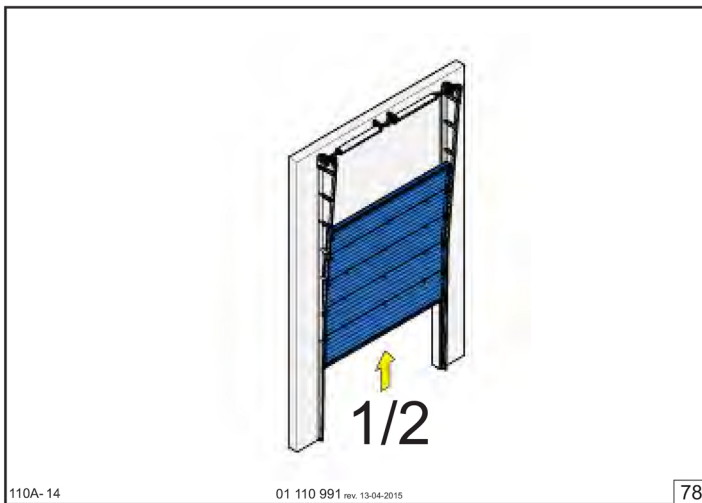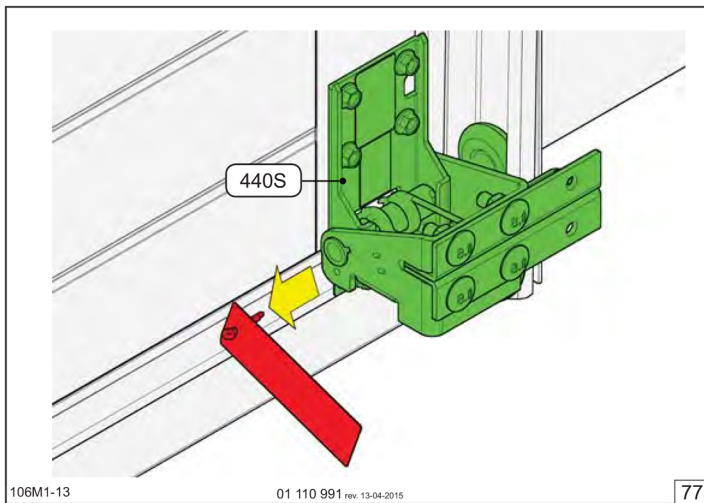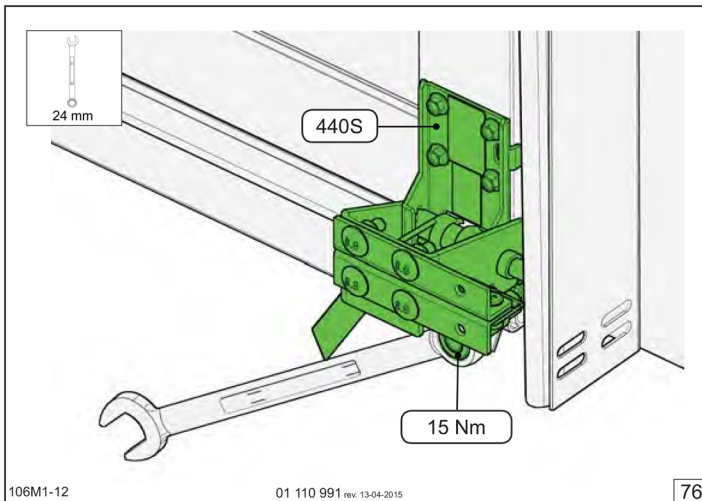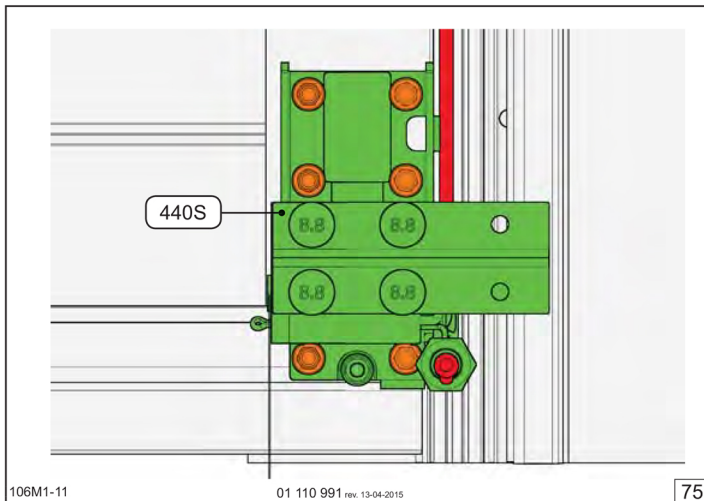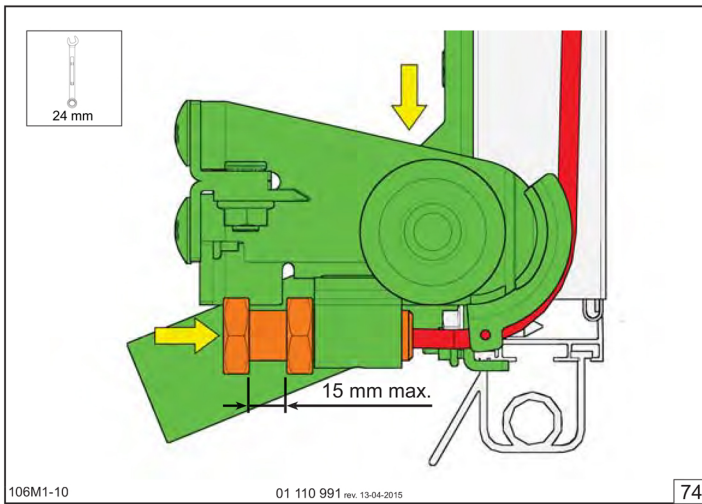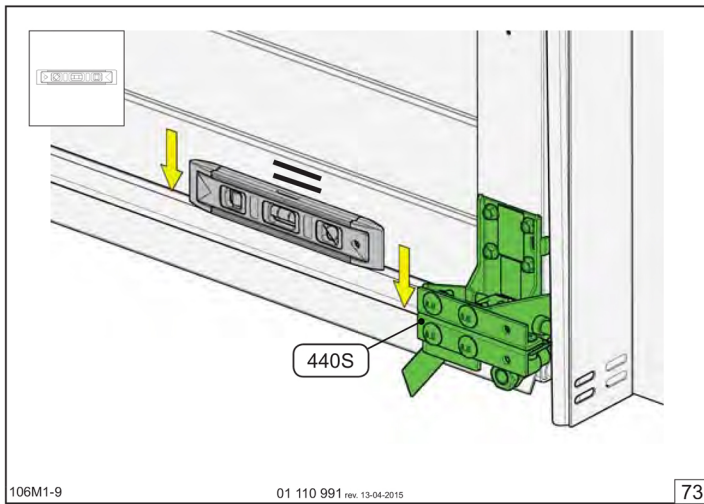

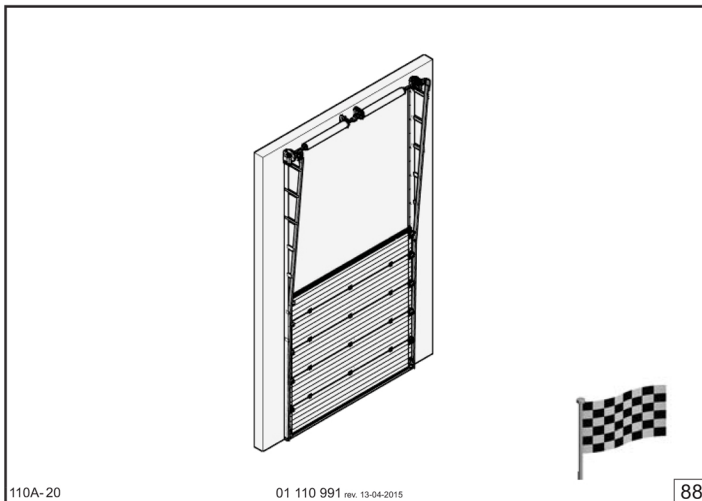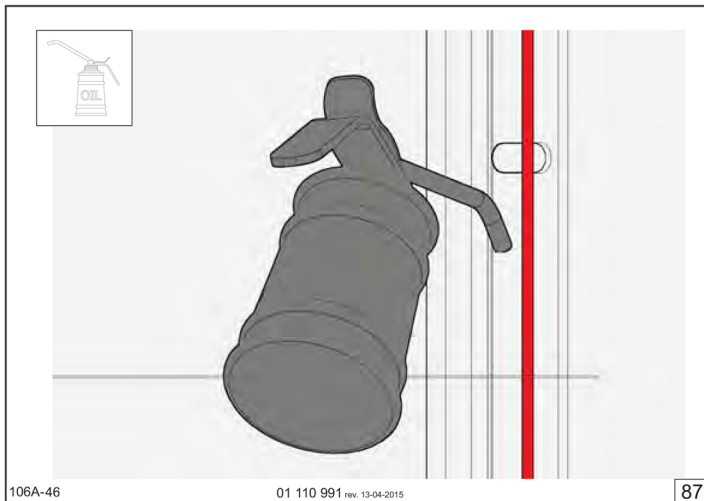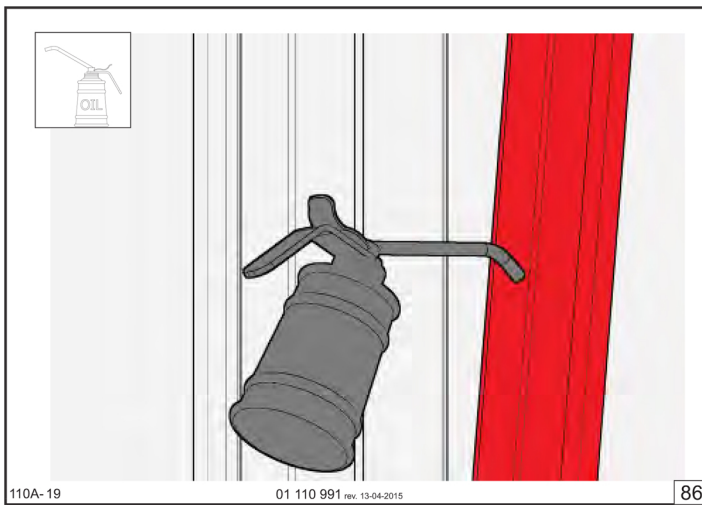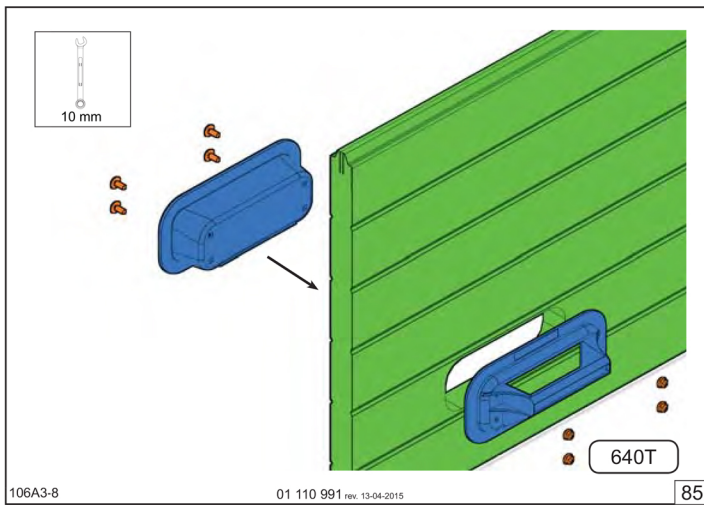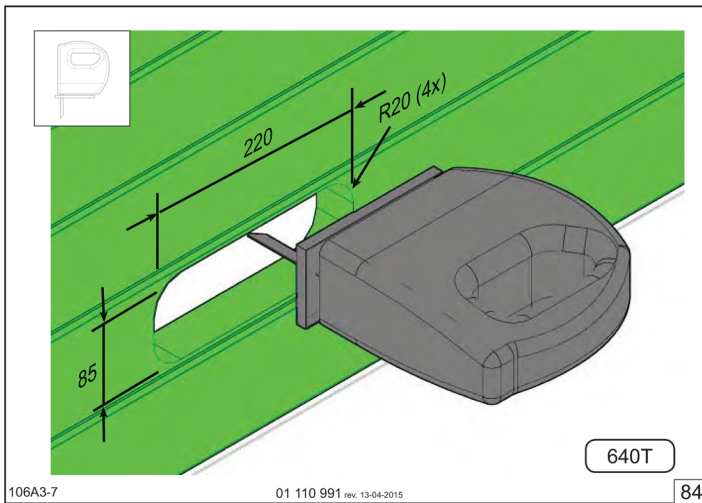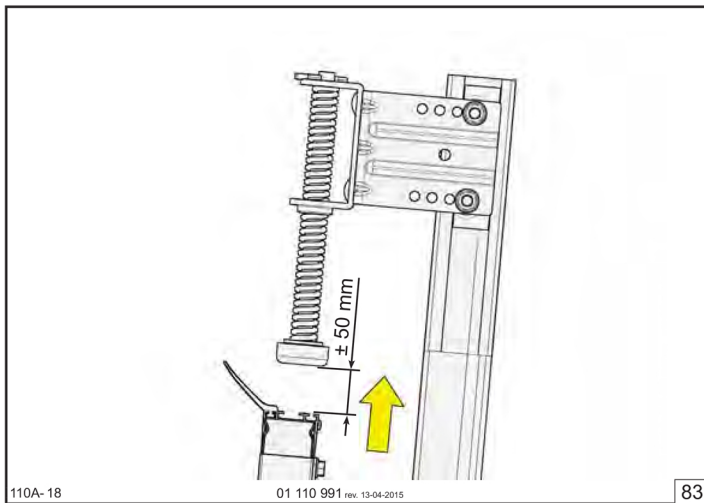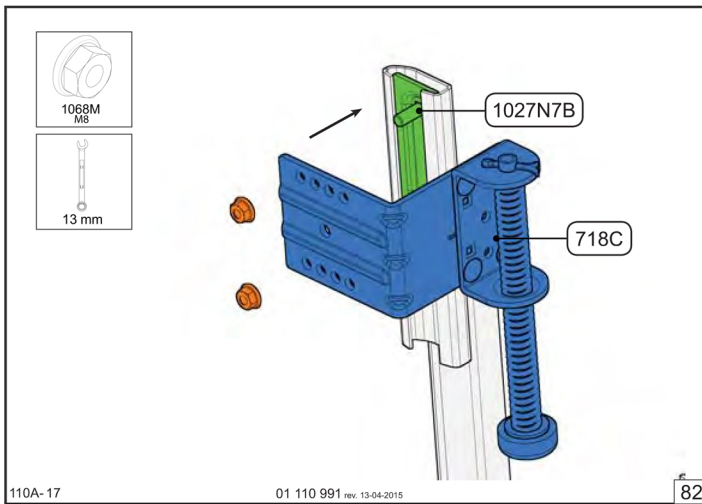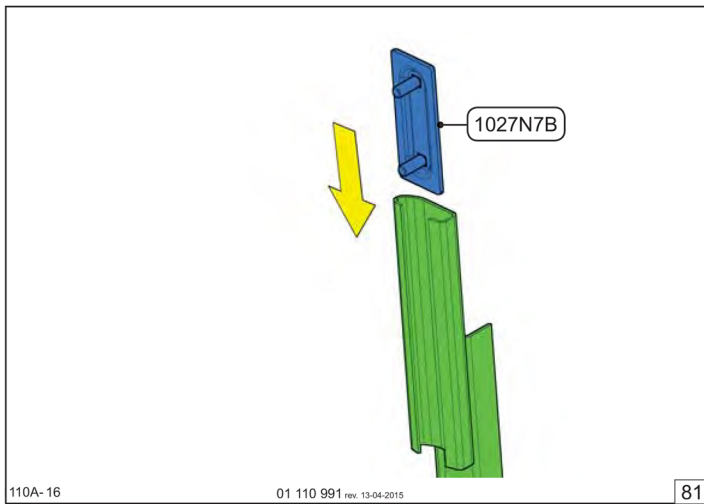



+90 212 347 09 30 - 31
Balmumcu Mah. Gazi Umur Paşa Sk. Balmumcu Plaza 3 No: 34 D:4
Beşiktaş / İstanbul / Turkey

+90 322 394 47 25 - 26
Hacı Sabancı Organize Sanayi Böl. 23 Nisan Cad.
No: 8
Adana / Turkey

info@pfi.it
www.pfi.it



+39 0934 682747
via Piave
No: 14/B
93100 - Caltanissetta / Italy